

200

DBA PHOENIX OPERATOR MANUAL

X-MAS

Menu description	Program	Change	Change	Change	Change	Change
1:clean 2:oil 3:both		03				
1:simultaneous 2:separate		01				
Start cleaning distanse		00				
Oil only dust 1:yes 2:no		01				
Oil pattern distance In feet		38				
Forward shift to 2 nd speed		05				
Forward shift to 3 rd speed		20				
Forward shift to High speed		35				
Fwd oil pad # 8r In inches		05				
Fwd oil pad # 7r In inches		0030				
Fwd oil pad # 6r In feet		34				
Fwd oil pad # 5r In feet		38				
Fwd oil pad # 11 In inches		0005				
Fwd oil pad # 21 In inches		0030				
Fwd oil pad # 31 In feet		34				
Fwd oil pad # 41 In feet		38				
Return shift down 3 rd speed		37				
Return shift down 2 nd speed		25				
Return shift down Low speed		05				
Rev oil pad # 8r In inches		0				
Rev oil pad # 7r In inches		0				
Rev oil pad # 6r In feet		32				
Rev oil pad # 5r In feet		32				
Rev oil pad # 11 In inches		0				
Rev oil pad # 21 In inches		0				
Rev oil pad # 31 In feet		32				
Rev oil pad # 41 In feet		32				
Add oil pad # 8r Off hits		0				
Add oil pad # 7r Off hits		0				
Add oil pad # 11 Off hits		0				
Add oil pad # 21 Off hits		0				
Distance between Hits/Feet		04				